

#### Admittance Spectroscopy and Deep-Level Transient Spectroscopy in Multijunction: a Tutorial to Characterize the Entire Cell

Cyril Léon, Sylvain Le Gall, Marie-Estelle Gueunier-Farret, Jean-Paul Kleider

#### ▶ To cite this version:


Cyril Léon, Sylvain Le Gall, Marie-Estelle Gueunier-Farret, Jean-Paul Kleider. Admittance Spectroscopy and Deep-Level Transient Spectroscopy in Multijunction: a Tutorial to Characterize the Entire Cell. Tandem PV Workshop 2022, May 2022, Freiburg-en-Brisgau, Germany. hal-03878578

#### HAL Id: hal-03878578 https://hal.science/hal-03878578

Submitted on 20 Nov 2023

**HAL** is a multi-disciplinary open access archive for the deposit and dissemination of scientific research documents, whether they are published or not. The documents may come from teaching and research institutions in France or abroad, or from public or private research centers. L'archive ouverte pluridisciplinaire **HAL**, est destinée au dépôt et à la diffusion de documents scientifiques de niveau recherche, publiés ou non, émanant des établissements d'enseignement et de recherche français ou étrangers, des laboratoires publics ou privés.

# Admittance Spectroscopy and Deep-Level Transient Spectroscopy in Multijunction

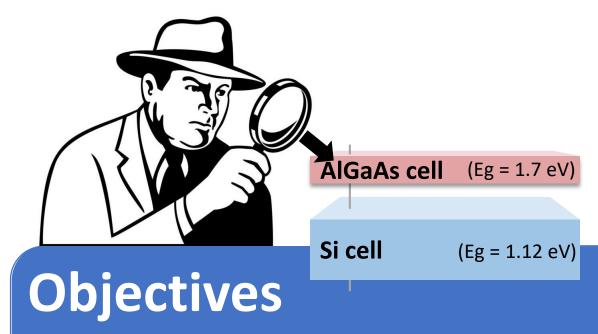

# A Tutorial to Characterize the Entire Cell


Cyril Leon<sup>1,2</sup>, Sylvain Le Gall<sup>1</sup>, Marie-Estelle Gueunier-Farret<sup>1</sup>, Jean-Paul Kleider<sup>1</sup>. <sup>1</sup>Group of electrical engineering - Paris (GeePs), CNRS, CentraleSupélec, Univ. Paris-Saclay, Sorbonne Univ., 11 rue Joliot-Curie, 91192 Gifsur-Yvette, France.

<sup>2</sup>Aix Marseille University, CNRS, IM2NP Campus de Saint Jérôme, Case 142, 13397 Marseille Cedex 20, France



John wants to get the defect properties of the AlGaAs subcell within his 2T tandem • cell using Admittance Spectroscopy (AS) and Deep-Level Transient Spectroscopy (DLTS).

He doesn't know yet that within the AlGaAs subcell, a 0.5 eV deep defect is present. If he could characterize this subcell alone, he would get:

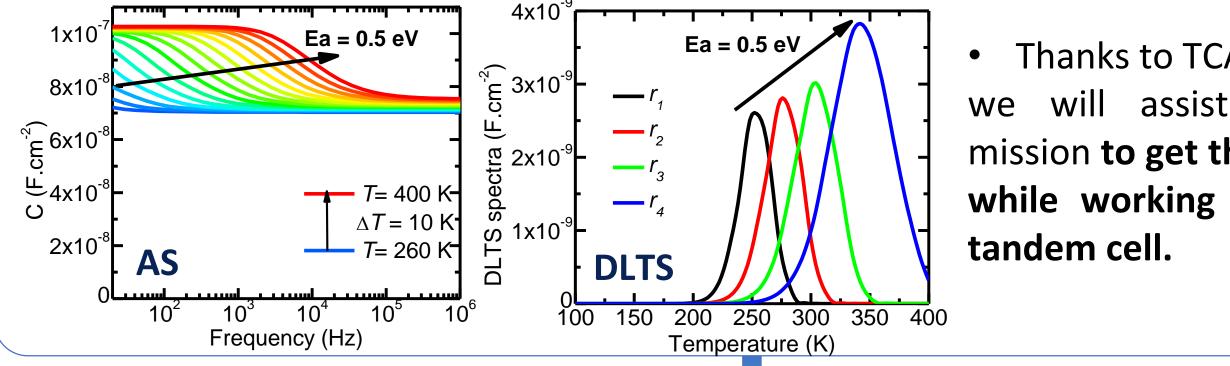


• Thanks to TCAD modeling, we will assist John in his mission to get the same results while working on the whole


### **Context & principles**

• AS two DLTS are and characterization techniques to extract information on the defects electrically active in a semiconductor.

• Although these techniques are widely used to characterize simple devices, they have been used to never characterize multijunctions.

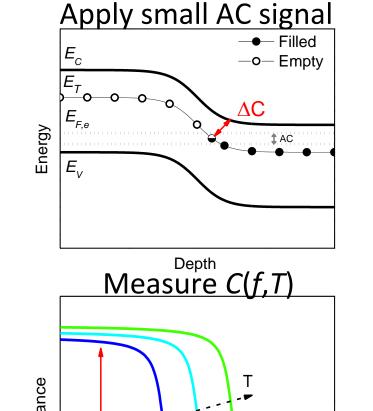

AS

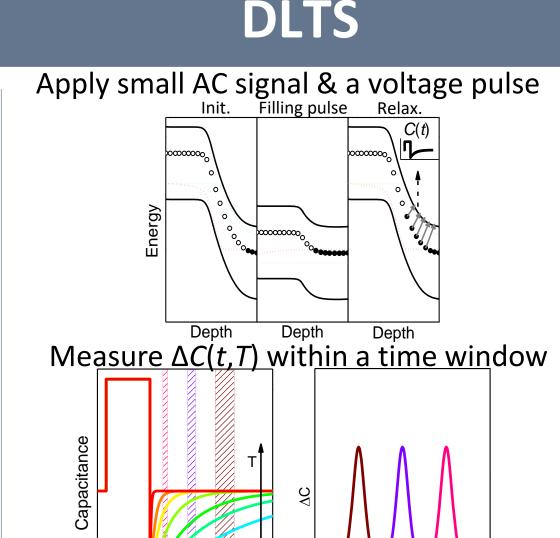


The variation of inflexions and pics with T gives Ea (the defect position)

## **First approach**

## Step by step tutorial

#### Measuring a tandem cell like a single junction

John simply places his tandem cell in his AS and DLTS setup and performs the measurments. He obtains:

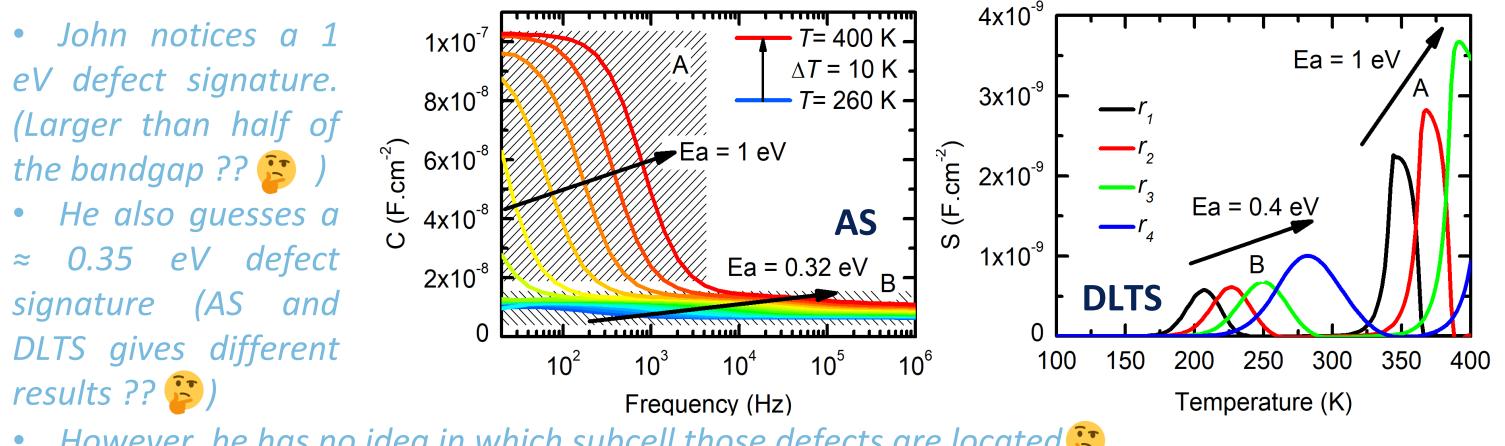

However, he has no idea in which subcell those defects are located 🔁.

Poor John! He did not get the expected results. Also, he is damn wrong with his conclusions.


## What is wrong with the first approach?

#### **Too many unknown & unmonitored parameters**

• Voltage distribution: Depends on the <u>unknown</u> J(V) of each subcell.

• Filling pulse distribution:

In John's case, 90 % of the filling pulse only apply on the Si cell and not on the AlGaAs cell.

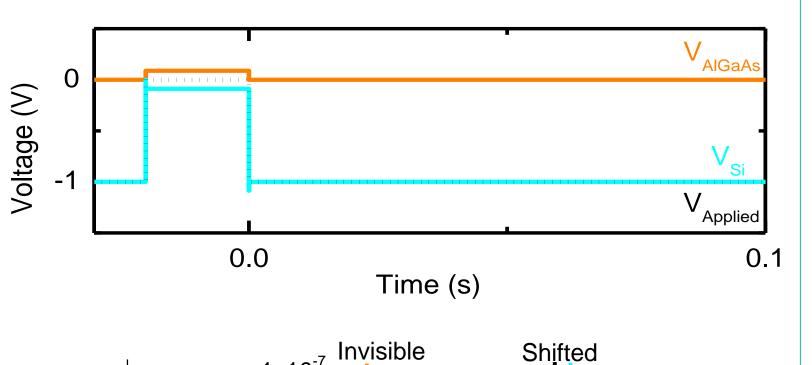

#### Step 1: Read


We suggested John to read this article: C. Leon *et al.* SolMat 240, 11699 (2022)



#### **Step 2: Let there be light!**

Now, he knows that he needs to light bias the subcell that he does not want to probe.


**Example:** He uses an IR laser to light bias the bottom Si cell and probe the top AlGaAs cell.

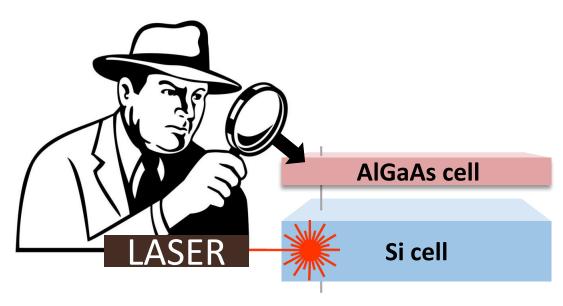

#### **Step 3: Measure & correct the voltage shift**

The subcell in the dark limits the current, forcing the absorbing subcell to be polarized at its  $V_{0c}$ . voltage probed in the The cell is:  $V_{\text{probe}} = V_{\text{applied}} - V_{\text{OC,Biased}}$ .

Under the IR laser, John measures  $V_{OC,Si} = 0.5$  V. He knows that in DLTS, to apply a filling pulse between -1 V and 0 V on the AlGaAs cell he has to apply on the whole tandem a filling pulse between -0.5V and 0.5V.

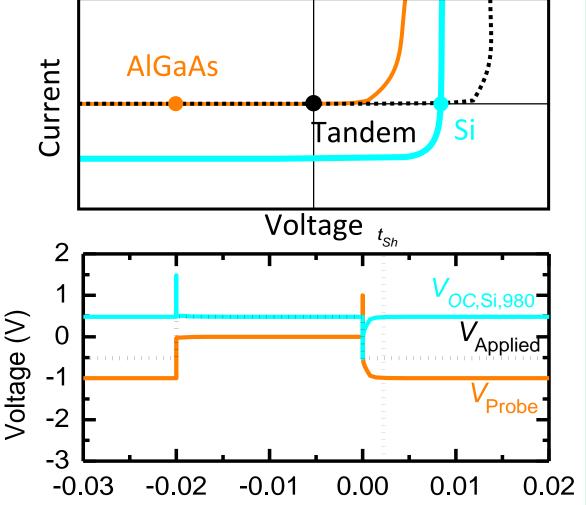

Time (s)

the Depends on unknown capacitance values of each subcell.


#### **Capacitance coupling:**

The measured capacitance results in a coupling of both <u>unknown</u> subcells Leading to capacitance. mixed, shifted or invisible defect signatures.

For John, only the defect in the Si cell can be seen but with errors in AS.


#### • Impact of the temperature:

The temperature can increase the diffusion phenomena leading to an artefact in the measurement that can be mistaken as the signature of a defect.

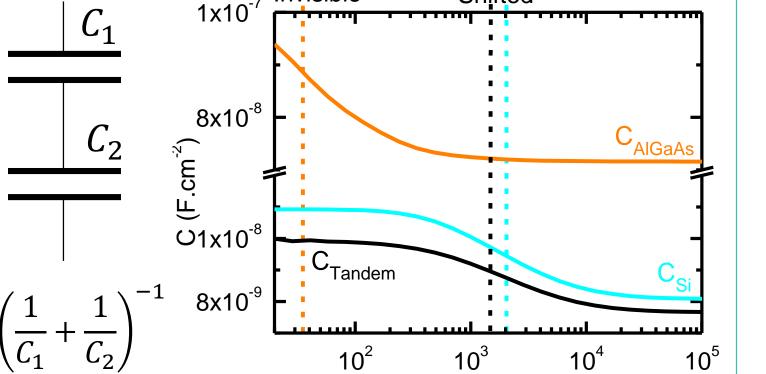

Even without defect in the modelling, the 1 eV signature can be seen:

Frequency (Hz)

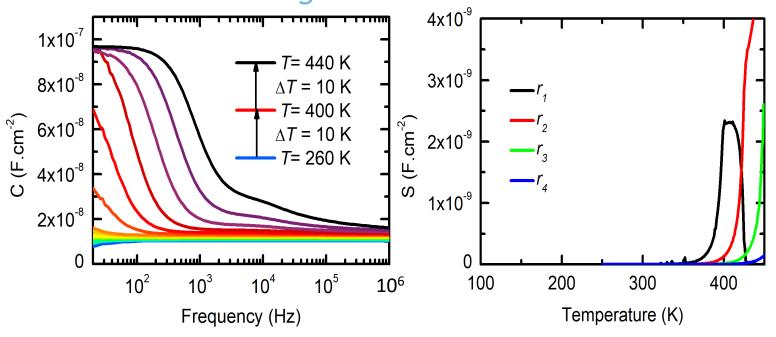


Poor John, by mistake, he probed the wrong subcell with errors and artefacts !


 $C_{2T} =$ 

#### **Step 4: Optimization**

- Diffusion phenomena in the absorbing subcell can shunt its capacitance.
- But also creates an inflexion in AS curves and a transient evolution in DLTS.
- These artefacts can be excluded from the measurement range by increasing the light intensity.

John measures C(f) and C(t) curves at room temperature. He notices some artefacts that shift when increasing the light intensity of the laser. He observes that at 100 mW, the artefacts are out of the frequency and time range of the measurement.

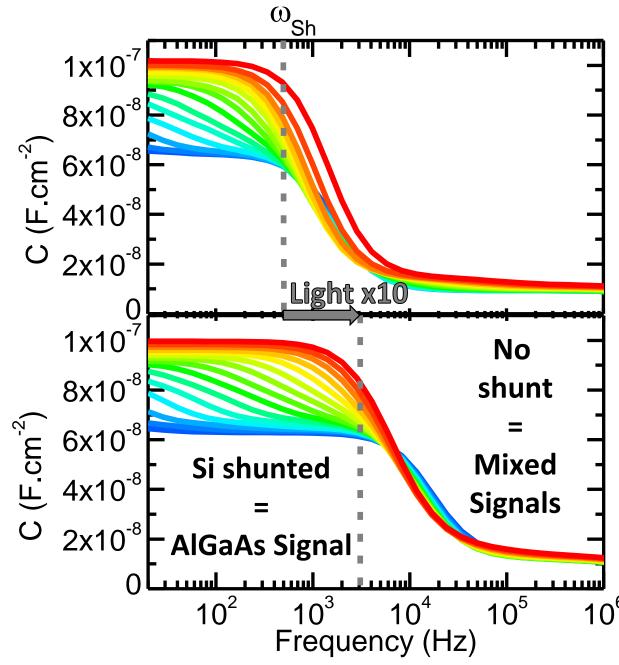

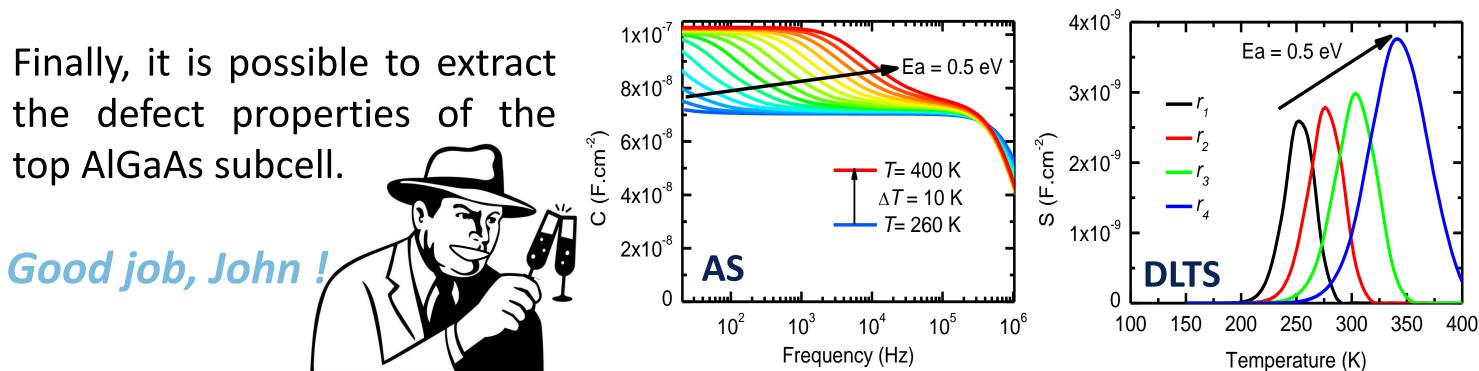

#### **Step 5: Enjoy (AS & DLTS measurements)**

#### **Using light biases**

(28) 2020

#### **Changes the electrical behavior of the tandem**

#### Diffusion phenomena in a subcell:

- Caused by the temperature in the dark (uncontrolled).
- Caused by a forward polarization (controlled using light bias).

experimentally This has been validated by extracting the doping densities in an AlGaAs/Si tandem cells using C(V). Here we extend the method to AS and DLTS. C. Leon et al. Prog Photovolt Res Appl

AlGaAs cell Si cell Shunts the absorbing subcells  $\omega_{\rm Sh}$  1/ $\tau_{\rm eff,2}$   $\omega_{\rm HF}$ 1.4x10 1.2x10 Single Bottom 1.0x10<sup>-</sup> - TSC<sub>o</sub> 8.0x10 6.0x10 4.0x10<sup>-8</sup> ---Single Top 2.0x10<sup>-8</sup>  $---(1/C_1+1/C_2)^{-1}$ Frequency (Hz)

#### Conclusions

• In the dark, signals of each subcell are mixed leading to wrong defect signatures.

Curriculum Vitae

• Under well chosen light biases, the absorbing subcells can be shunted and only the one that remains in the dark is probed.

My mission is now complete and I am looking for a new one! (Available from September)

### tandemPV Workshop 2022

May 30 – June 1 | 2022 Freiburg, Germany

leon\_cyril@hotmail.fr

Jobs